



Product Use and Care *#2155 Wine Bottle Opener*

This Wine Bottle Opener with foil cutter provides the essential tools to effortlessly uncork bottles with a quick twist of the wrist!

Important Safeguards

Corkscrew and foil cutter blade are **sharp** to provide optimal performance and may cause injury if not used properly. Please follow these important safeguards:

- Carefully read and follow all use and care instructions prior to first use.
- Avoid direct contact with corkscrew tip and foil cutter blade edge as they may cause injury.
- Always keep this and all other cutting devices out of children's reach.

How to Use

If bottleneck is sealed with foil, begin with step 1. If bottleneck does not have foil, complete step 1 and proceed to step 3.

1. Remove foil cutter from bottom of Wine Bottle Opener by securely holding Wine Bottle Opener in one hand and grasping foil cutter tabs with other hand. Pull foil cutter away from Wine Bottle Opener.
2. Position foil cutter over bottleneck. Press in foil cutter prongs with thumb and forefinger while rotating bottle. After 1 - 2 complete rotations, remove foil cutter from bottleneck. Use caution to remove and discard foil. Set foil cutter aside.
3. To uncork bottle, position the fully extended Wine Bottle Opener over the bottleneck. Hold opener securely on bottleneck.
4. Turn knob clockwise. Continue turning clockwise to cause the corkscrew to bore through the center of the cork. Remove opener from bottleneck.
5. To remove cork, turn knob counterclockwise until cork releases.
6. For convenient storage, replace foil cutter into bottom of opener securing into locked position.

NOTE: The Wine Bottle Opener is **not** recommended for use with sparkling wine or champagne.

How to Clean

- Dishwasher-safe when placed away from heating element.

Guarantee

- Manufacturer's 3-year guarantee covers product replacement only.